

220-240V / 50-60Hz

IP65

 


WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person. **LUMINAIRES WITH EMERGENCY PACK:** When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.


Terminal Labelling:	
Power	
L1	Switched Live
E	Earth
N	Neutral
Emergency	
L2	Unswitched Live
DA/AT3	DALI Autotest
DA/AT3	DALI Autotest
Dimming	
-D1/DA	Analogue/DSI/DALI
+D2/DA	Analogue/DSI/DALI
L3	Switch Dim / Corridor Function

1.

Parts included: (supplied in bag)



x2 Eye Nut

 

x4 nut



x4 Washer




x4 screw




x4 IP Grommet

2.

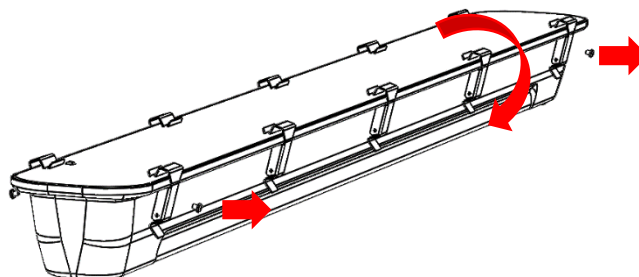


Unclip all to release the front cover.

3.

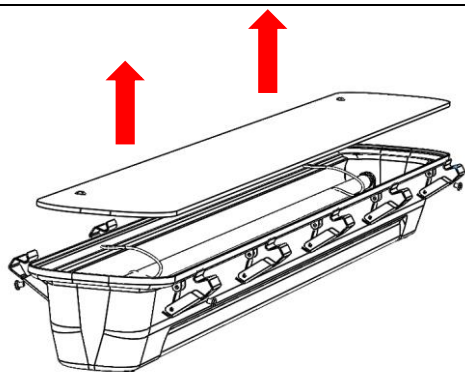

Remove front cover (cover is retained on 2No wire hangers)


4.

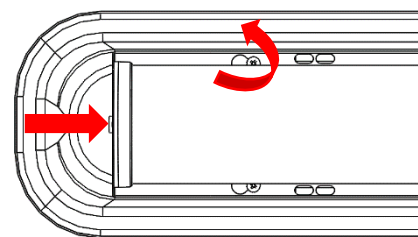

Loosen all 6 screws and slide the gear tray to release it from the body.


5. Suspended

Insert grommet into the rear of the housing. Place a washer either side of the grommet and lock in place with a nut and eyebolt.

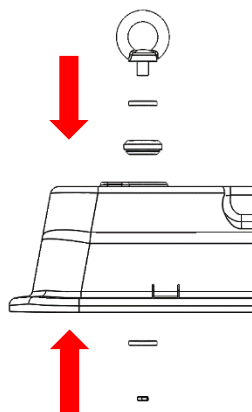

6. Surface

Insert grommet into the rear of the housing. Place a washer either side of the grommet and fasten the screw through all into the ceiling.

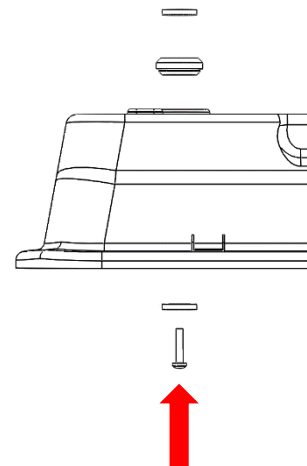

<p>7. Trunking & Conduit</p> <p>Drill a 20mm Hole through rear of fitting. Compress two penny washers & two rubber washers with the 20mm Bush (supplied by contractor).</p>	<p>8.</p> <p>Feed cable through the IP gland supplied and wire into the appropriate terminals. Use cable clamp kit provided.</p>
<p>9.</p> <p>Slide Body back onto the screws and fasten until tight.</p>	<p>10.</p> <p>Replace front cover.</p>
<p>11.</p> <p>Push the clips back on top of the cover and fit the 4 retaining screws into the end 4 clips.</p>	<p>12.</p> <p>NOTES:</p> <ul style="list-style-type: none"> a) Full IP ratings only apply when luminaire is mounted horizontally facing downward on a ceiling. b) It is the responsibility of the installer to ensure the IP ratings are maintained during installation of the fitting. c) Operating temperature is 0°C to 25°C. If the temperature exceeds the drivers maximum TA there is a safety mechanism where the driver will either dim or switch off to allow it to cool.

Maintenance

- 1 Disconnect luminaire before undertaking any maintenance or cleaning.
- 2 Cleaning should be undertaken on external parts of the luminaire only with a damp lint free cloth.
- 3 To access fitting unclip all clips to release diffuser.
- 4 Loosen all 6 screws using a pan pozi screwdriver and slide gear tray out from housing.
- 5 To access LED circuit use a flat head screwdriver to push into endcap to release. Slide diffuser out from tray.
- 6 Use a pan pozi screwdriver to remove components.

7 Please contact Dextra for assistance with spare component supply.

