
MOD Edge Installation

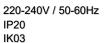



Terminal Labelling:

L1 E (1) N Emergency Switched Live Earth Neutral

L2 DA/AT3 DA/AT3 Dimming -/D1/DA +/D2/DA L3 Unswitched Live DALI Autotest DALI Autotest Analogue/DSI/DAI


Analogue/DSI/DALI Analogue/DSI/DALI Switch Dim / Corridor Function



qua 25° Ter sha LUI if b uns con of electric shock

WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person. LUMINAIRES WITH EMERGENCY PACK: When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

With colour switching versions, C83/65, power must be isolated before changing colour temperature to avoid damage to the luminaire or control gear.

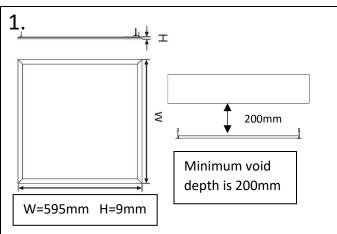


2.







Remove ceiling tile Offer MODE luminaire into ceiling void

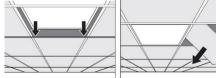


Rest MODE luminaire Remove adjacent on the exposed T grids ceiling tile

3.

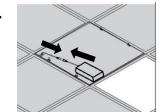

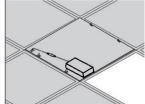




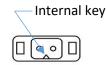


Connector between MODE and driver is keyed internally and has external arrow identification – ENSURE THIS IS CONNECTED CORRECTLY!!

4. Standard version electrical connection

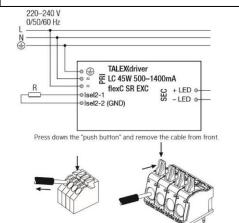

5. Status LED

For emergency versions, status LED must be located in adjacent tile, as close to luminaire as possible

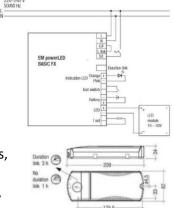

Batteries not shown

MOD Edge Installation



