

## Self Test LED:

Explanation



Off



On



Slow Flash

 


Quick Flash

Status




Normal Status



Power Failure/Emergency-light-operated



 
Function Test




Emergency Duration Test



 Emergency Duration <2H



Illuminant/ Charge over defect

 

Battery/Charge Defect

## Installation Instructions

### HBE LED M3 ST3

#### LED Exit Signs

Please retain these instructions for future reference



## HBE LED M3 ST3

HBE LED M3 ST3 suspended Exit signs are available with a selection of ceiling and wall mounting plates. The selected mounting plate should be fitted to the mounting surface using fixings appropriate to the application. Supply cables should be installed according to National Wiring Regulations and should suit the type of mounting arrangement chosen.

The body is provided with two fixing studs. These pass through the holes provided in the mounting bracket and the quarter turn twist locks are rotated so the blade of the flat hooks locate into the slots on the mounting studs.



1. Undo the single screw in the end-cap adjacent to the cable entry and pull the plastic end-cap away from the extruded body
2. Slide the aluminium front cover along to gain access to the circuit board and supply terminals
3. Bring the supply cable through the top hole provided and connect to the terminal block: L1 is for switched maintained supply if required, L,N,E are for the permanent supply to charge the integral battery.
4. Replace the front cover and the end plate

**NB:** These units are available with a simple Self-Test feature. If fitted this circuit will carry out function checks once per month and indicate any problems with the battery or circuit.

HBE LED M3 ST3 luminaires use long life LED's to illuminate the sign legend. There are no customer serviceable parts. They are designed to last for 5 years after which time they should be sent for recycling and replaced with a new unit.

The legends are fitted via four thumb-screws. Therefore legends can be easily be changed when the luminaire is installed.